

Installation of Replacement Boot Button for Renault Scenic

A. Removing the boot lock assembly

1.



Open the boot and, using the T-20 Torx screwdriver unscrew the four screws, which hold the interior boot trim in place (some models have an additional two screws near the wiper motor). Unhook the parcel shelf bungees from the trim. To remove the trim, pull firmly all around the edges, you will hear a snapping sound, this is just the clips that hold it in place.

2.




Disconnect the plug from the lock motor and using the 10mm spanner, undo the two fastening nuts which hold the lock assembly to the tailgate panel.

Remove the lock assembly by gently pulling, you will need to release the metal switch lever by sliding it to the bottom of the "L" shaped channel and twisting slightly. Do not force it!

B. Fitting the new lock button

3.

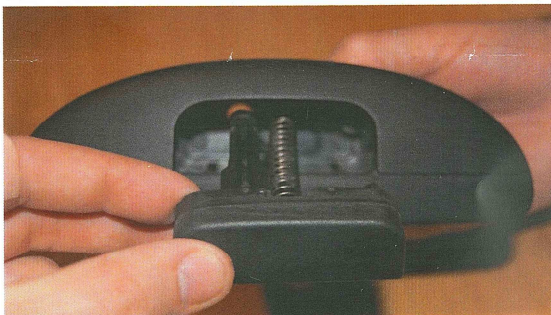

Line up spring and push the long piece through the hole so it sticks out the back

4.

Holding back the spring arm, fit the rubber o ring into the recessed slot like the original. Push the o-ring over and stretch it down to the slot.

C. Re-assembly

5.

Re attach the metal lever to the sprung arm. The bent end fits through the bottom of the "L" shaped slot with the square end. Bolt the assembly back onto the tailgate panel, remembering to plug the power supply back onto the lock motor. At this stage you can check your installation by closing the tailgate and pressing the button. Also test the remote central locking.

6.

Place the interior trim in place, thump around the edges with a clenched fist to secure, again you will hear a snapping sound of the clips re attaching.

Replace the four screws and reattach the parcel shelf bungees. All finished, well done!